



Teclab Base Cabinets are offered in two distinct styles.

LABORATORY BASE CABINETS


Teclab's Laboratory(Wetlab) style cabinets are 22" deep. When installed under a standard 30" counter-top, there is ample room for plumbing and other utilities behind the cabinets. The drawer and door faces of Lab Cabinets are inset into the cabinet to protect the contents from spills.

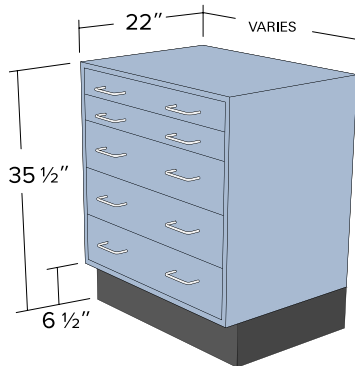

BENCH HEIGHT LAB CABINET

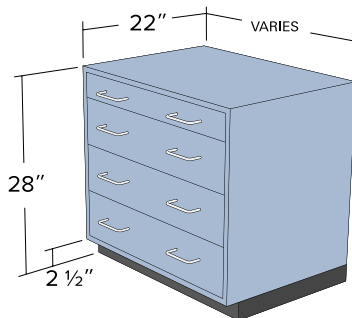


DESK HEIGHT LAB CABINET

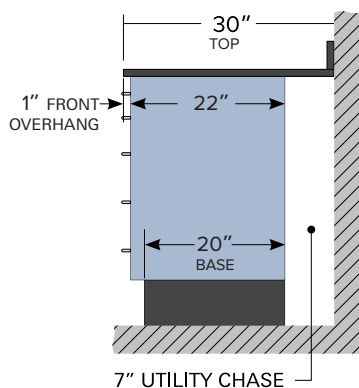


TYPICAL LAB CABINET INSTALLATION

TECHNICAL BASE CABINETS


Teclab's Technical(TWS) style cabinets are 28" deep. The extra depth allows for massive amounts of storage and increased stability in free-standing installations. TWS Cabinets are often used as a basis for creating a Workbench.

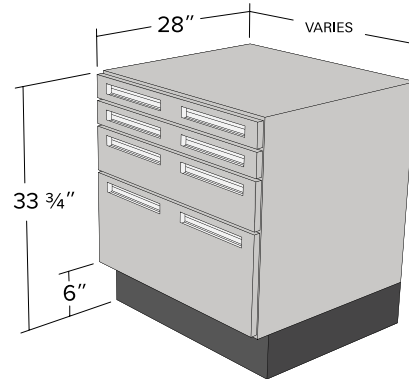

BENCH HEIGHT TWS CABINET

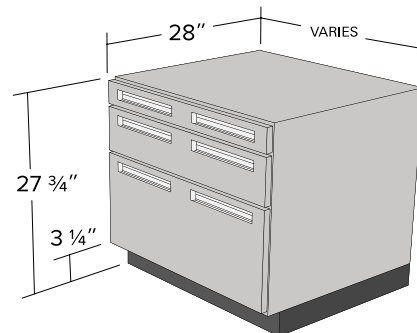

DESK HEIGHT TWS CABINET

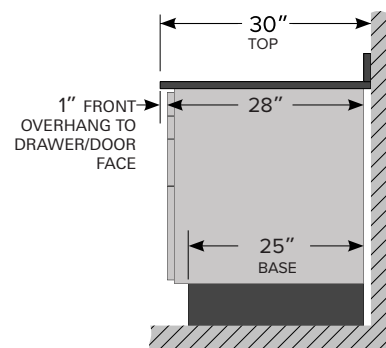

TYPICAL TWS CABINET INSTALLATION