

DECK MOUNTED HAND HELD EYE-WASH STATION

ANSI-Compliant Hand-Held Eye Wash Station with Pipe Connection, Bench Mount

Application: Dual purpose eyewash/drench hose for deck mounting. Unit meets the provisions of ANSI Z358.1-2009 as both an eyewash and a drench hose. Unit may be left in the deck flange for use as a fixed eyewash, leaving user's hands free. Alternatively, unit may be removed for use as a drench hose to rinse any part of user's eyes, face or body.

Spray Head Assembly: Two GS-Plus™ spray heads mounted side-by-side. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: Forged brass squeeze valve activated by stainless steel lever handle. Valve has replaceable stainless steel seat for exceptional durability. Locking clip engages when handle is depressed, providing "hands free" operation. Valve stays open until locking clip is released.

Hose: 8' reinforced PVC hose. 300 PSI maximum working pressure.

Mounting: Deck flange for countertop mounting. Flange has handle locator guide to position spray heads and handle facing forward at all times.

Backflow Preventer: In-line dual check backflow preventer installed on inlet of hose (G5022BP only). Note: Check with code authority for compliance with local plumbing code.

Supply: 3/8" NPT male swivel-type inlet.

Sign: ANSI-compliant identification sign.


Quality Assurance: Unit is completely assembled and water tested prior to shipment.



EW-HH

Station Type	Eye Wash
Eye Wash Coverage	Eyes, Face
Wash Fluid Source	Building Water Connection
Mounting Location	Bench
Valve Material	Chrome-Plated Brass
Spray Arm Material	Chrome-Plated Brass
Bowl Type	None
Station Activation	Squeeze Trigger
Inlet	
Pipe Connection Type	Threaded
Pipe Size	3/8
Thread Type	NPT
Gender	Male
Hose	
Material	PVC
Length	8 ft.
For Cutout Diameter	1 3/8"
Includes	Eye Wash Sign
Specifications Met	ANSI Z358.1
RoHS	Not Compliant
REACH	Not Compliant
DFARS	Specialty Metals COTS-Exempt
Country of Origin	United States
USMCA Qualifying	No
Schedule B	848190.9090
ECCN	EAR99

DECK MOUNTED HAND HELD EYE-WASH STATION

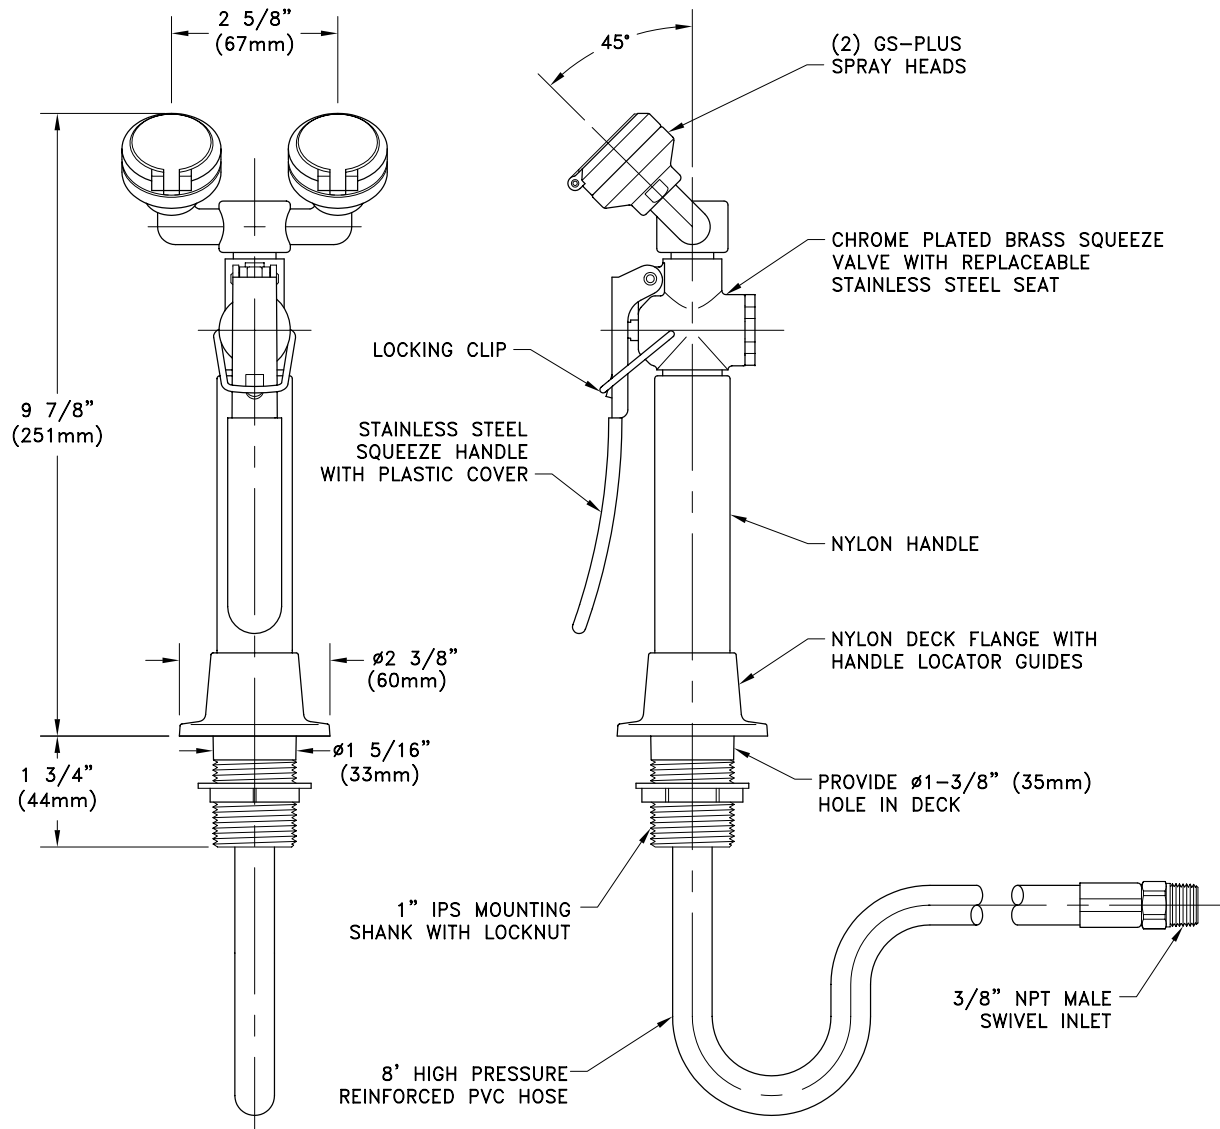

NOTES:

1. EACH GS-PLUS SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
2. HOSE SHOULD NOT BE USED IN APPLICATIONS WHERE WATER PRESSURE EXCEEDS 90 PSI. HOSE SHOULD BE INSPECTED PERIODICALLY FOR DETERIORATION.

Sign Included



Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are $\pm 1/4"$ (6mm).