

MANUAL SINK FAUCET FM8-412-WM

PRODUCT TYPE

Wall Mounted 8" Body, Adjustable Arms 7-1/4" - 8-3/4" Hot and Cold Water Sink Faucet

FEATURES & SPECIFICATIONS

8" rigid/swing gooseneck spout

8" Body, Adjustable Arms 7-1/4" - 8-3/4"

2.2 GPM (8.3 L/min) Aerator

2-3/8" Vandal Proof Lever

3/8" Offset Inlet Supply Arm

2 5/16" Diameter Slip Flange

PERFORMANCE SPECIFICATION

- Rated Operating Pressure: 20-125 PSI
- Rated Operating Temperature: 40-140oF

WARRANTY

Lifetime Limited Faucet Warranty

5-Year Limited Cartridge Warranty

1-Year Limited Finish Warranty

CODES AND STANDARDS

ASME A112.18.1/CSA B125.1

Certified to NSF/ANSI 61, Section 9 by CSA


ADA ANSI/ICC A117.1



MANUAL SINK FAUCET FM8-412-WM

ARCHITECT/ENGINEER SPECIFICATION

Sink Faucet for hot and cold water, wall-mounted with adjustable arms for 7-1/4" - 8-3/4" centers. Chrome plated. Rigid/swing gooseneck spout, 8" center-to-center. 2.2 GPM (8.3 L/min) pressure compensating aerator. 2-3/8" metal, vandal-proof, lever handles with sixteen-point, tapered broach and secured blue and red index buttons. Rebuildable compression cartridge, opens and closes 90°, closes with water pressure, features square, tapered stem. 3/8" offset inlet supply arm with 1/2" NPT female thread inlet. 2-5/16" diameter slip flange. This product meets ADA ANSI/ICC A117.1 requirements and is tested and certified to industry standards: ASME A112.18.1/CSA B125.1, and Certified to NSF/ANSI 61, Section 9 by CSA.

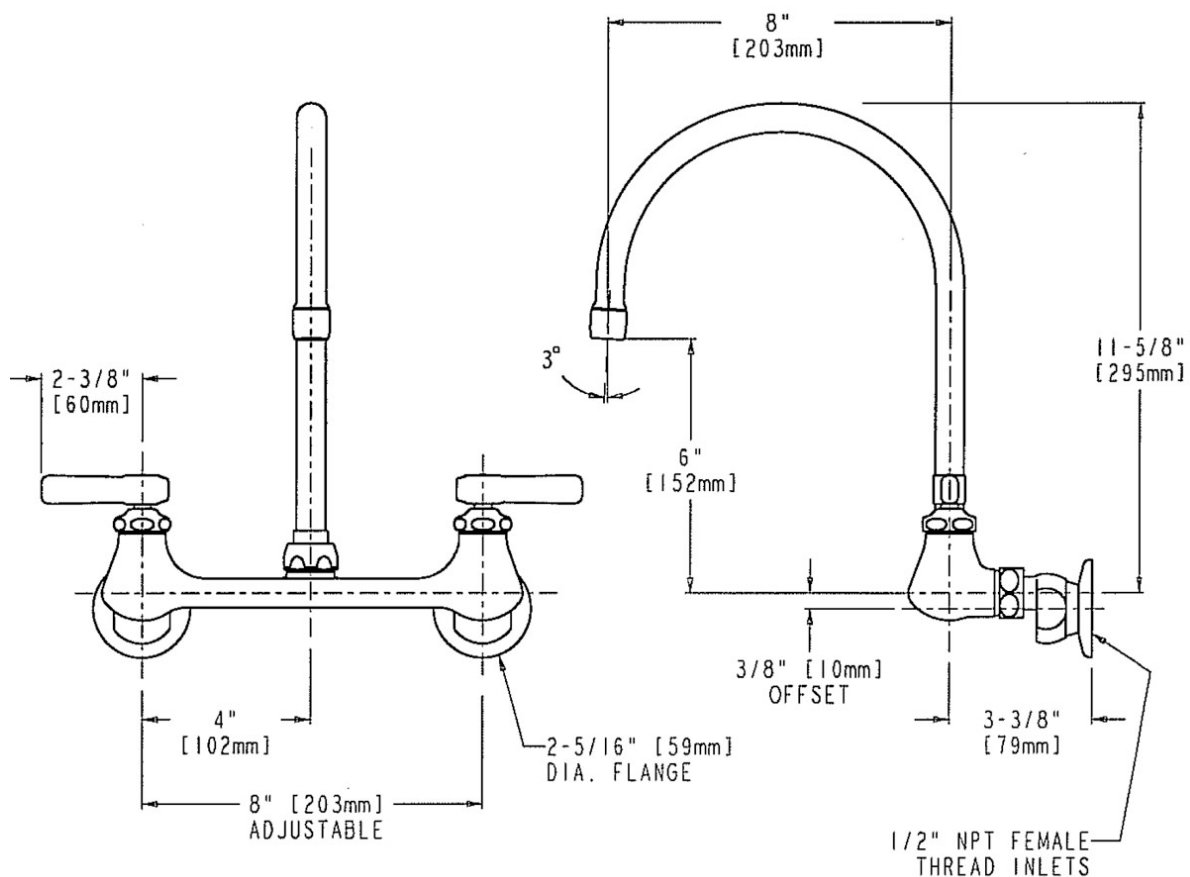

OPERATION AND MAINTENANCE

Installation should be in accordance with local plumbing codes. Flush all pipes thoroughly before installation. After installation, remove spout outlet or flow control and flush faucet thoroughly to clear any debris. Care should be taken when cleaning the product. Do not use abrasive cleaners, chemicals or solvents as they can result in surface damage. Use mild soap and warm water for cleaning and protecting the life of the product.