

REMOTE SPOUT (FOR USE WITH FOOT PEDAL VALVE)

PRODUCT TYPE

Deck-mounted remote spout

FEATURES & SPECIFICATIONS

5-1/4" rigid/swing gooseneck spout

Pressure compensating Softflo aerator 2.2 GPM

ECAST® design provides durable cast brass construction with total lead content equal to or less than 0.25% by weighted average

Complies with the requirements of the Buy American Act of 1933.

PERFORMANCE SPECIFICATION

Rated Operating Pressure: 20-125 PSI

Rated Operating Temperature: 40-140°F

WARRANTY

5-Year Limited Cartridge Warranty

Lifetime Limited Faucet Warranty

1-Year Limited Finish Warranty

CODES & STANDARDS

ASME A112.18.1/CSA B125.1

NSF/ANSI 372 Low Lead Content


NSF/ANSI/CAN 61: Q ≤ 1



REMOTE SPOUT (FOR USE WITH FOOT PEDAL VALVE)

ARCHITECT/ENGINEER SPECIFICATION

Remote Rigid/Swing Gooseneck Spout, chrome plated, 5-1/4" center-to-center. 2.2 GPM (8.3 L/min) pressure compensating Softflo aerator. 1/2" NPSM supply inlets and coupling nut for 3/8" or 1/2" flexible riser. ECAST® construction with less than 0.25% lead content by weighted average. This product is tested and certified to industry standards: ASME A112.18.1/CSA B125.1, Certified to NSF/ANSI 61, Section 9, California Health and Safety Code 116875 (AB1953-2006), Vermont Bill S.152, and NSF/ANSI 372 Low Lead Content.

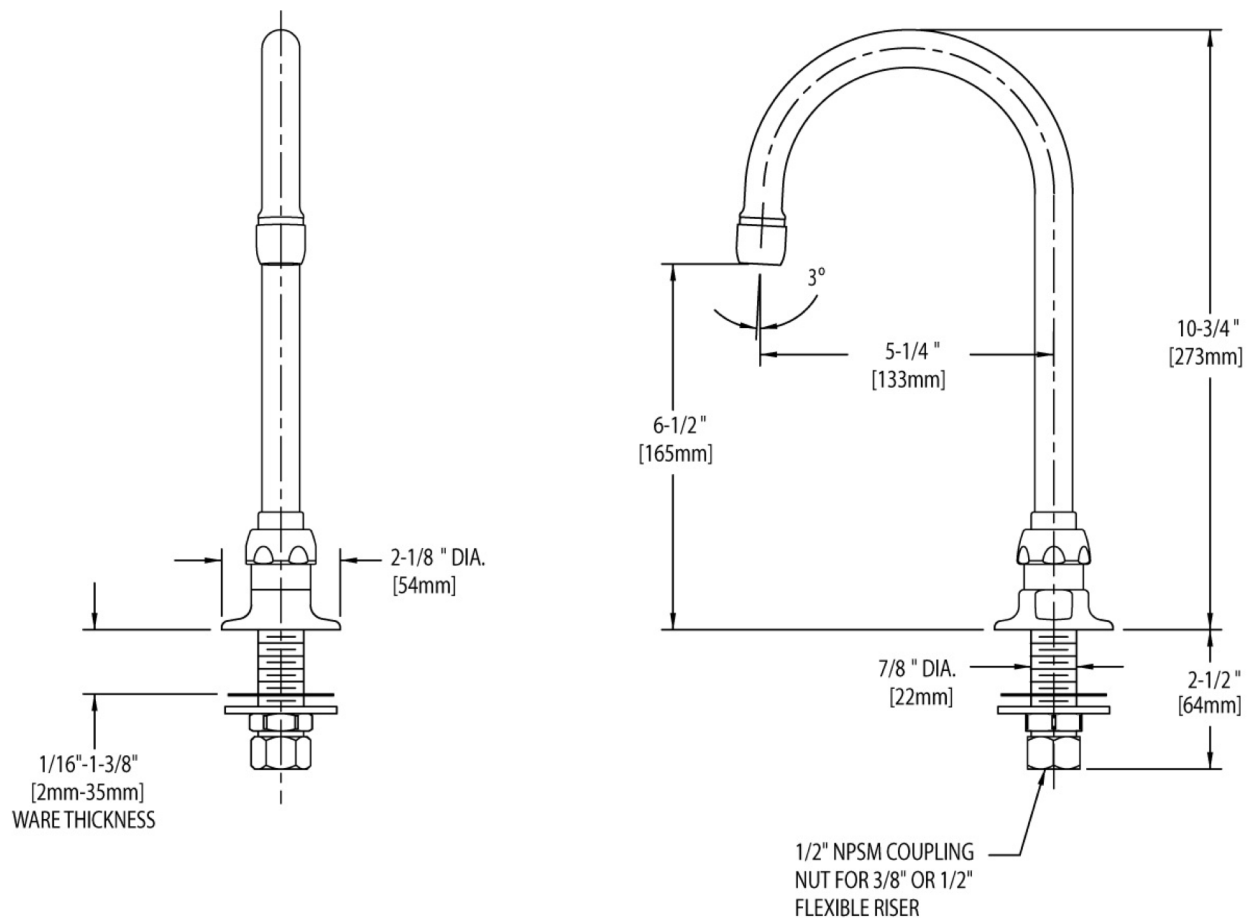

OPERATION AND MAINTENANCE

Installation should be in accordance with local plumbing codes. Flush all pipes thoroughly before installation. After installation, remove spout outlet or flow control and flush faucet thoroughly to clear any debris. Care should be taken when cleaning the product. Do not use abrasive cleaners, chemicals or solvents as they can result in surface damage. Use mild soap and warm water for cleaning and protecting the life of the product.