

DISTILLED WATER FS8-612-DI

PRODUCT TYPE

Deck-mounted, tin-lined laboratory pure water fitting

FEATURES & SPECIFICATIONS

5-1/4" rigid/swing gooseneck spout

Laboratory nozzle with 10 serrations for laboratory hose

Vandal Proof 4" wristblade handle

Self-closing cartridge, cam and cap design

Complies with the requirements of the Buy American Act of 1933.

PERFORMANCE SPECIFICATION

Rated Operating Pressure: 20-125 PSI

Rated Operating Temperature: 40-140°F

WARRANTY

5-Year Limited Faucet Warranty

Lifetime Limited Faucet Warranty

1-Year Limited Finish Warranty


5-Year Limited Mechanical Warranty



DISTILLED WATER FAUCET FS8-612-DI

ARCHITECT/ENGINEER SPECIFICATION

Distilled Water Faucet, tin lined, deck-mounted, chrome plated. Rigid/swing gooseneck spout, 5-1/4" center-to-center. Serrated, full-flow laboratory nozzle. 4" metal, vandal-proof, wristblade handle with sixteen-point, tapered broach and secured, white index button. Rebuildable self-closing cartridge, immediate shut-off, opens and closes 90° bi-directional, features square, tapered stem. Includes tailpiece with 1/4" NPT male thread inlet. This product meets ADA ANSI/ICC A117.1 requirements and is tested and certified to industry standards: ASME A112.18.1/CSA B125.1, and Certified to NSF/ANSI 61, Section 9 by CSA.

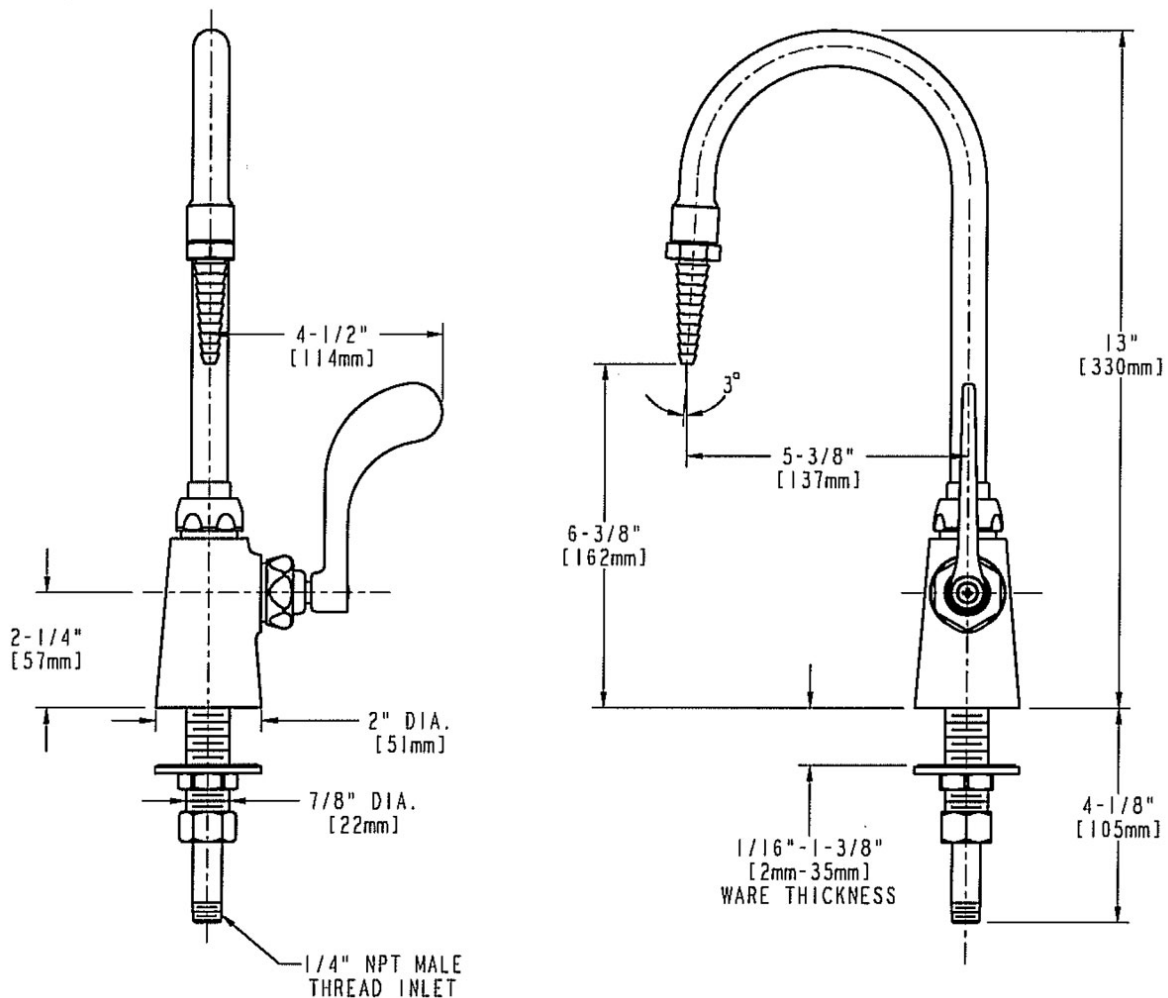

OPERATION AND MAINTENANCE

Installation should be in accordance with local plumbing codes. Flush all pipes thoroughly before installation. After installation, remove spout outlet or flow control and flush faucet thoroughly to clear any debris. Care should be taken when cleaning the product. Do not use abrasive cleaners, chemicals or solvents as they can result in surface damage. Use mild soap and warm water for cleaning and protecting the life of the product.