

COMBINATION SAFETY SHOWER, EYE/FACE WASH

- Complies with American National Standard Z358.1
- Galvanized Steel Protected with Safety Yellow Coating
- Combination Unit - May be Top-Supplied or Mid-Supplied
- Universal Identification Sign and Inspection Tag Included
- Full, One-Year Warranty
- Classified by Underwriters Laboratory Inc. to ANSI Z358.1

SPECIFICATIONS


Combination Safety Shower and Eye/Face Wash Unit saves space and fits easily into any work environment. Shower valve operates quickly by a pull rod with a triangular handle. Shower provides a superior wash down with a more even spray pattern. Eye/Face Wash operated by a large, highly visible push handle. Safe, steady water flow under varying water supply conditions from 30–90 PSI is assured by integral flow control in the sprayhead assembly. NOTE: The ANSI Z358.1 standard requires an uninterrupted supply of flushing fluid at a minimum 30 PSI flowing pressure. Eye/Face Wash sprayheads contain an antimicrobial agent to protect the sprayheads.

- ☒ This plumbing fixture is not intended to dispense water for human consumption through drinking or for preparation of food or beverages.
- ☒ Local codes may require the installation of a backflow prevention valve to complete proper installation. Compliance with local codes is the responsibility of the installer. Valve must be tested annually to verify that it is functioning properly. Backflow prevention valves are not included with the fixture and may be supplied by the contractor or purchased separately.

STANDARD EQUIPMENT


Showerhead

3.1" (78.7mm) diameter highly visible yellow impact-resistant plastic. Showerhead features integral 22 GPM flow control, conserving water and helping to accurately size your tepid water system.

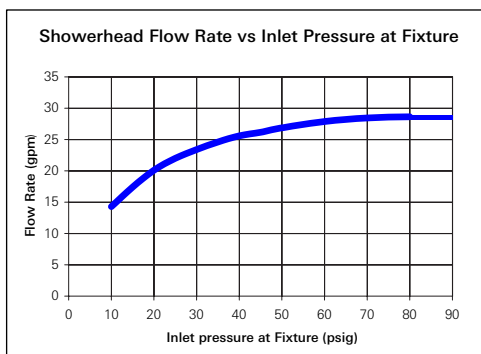

Eyewash Bowl

10 3/4" (273mm) diameter corrosion-resistant stainless steel.

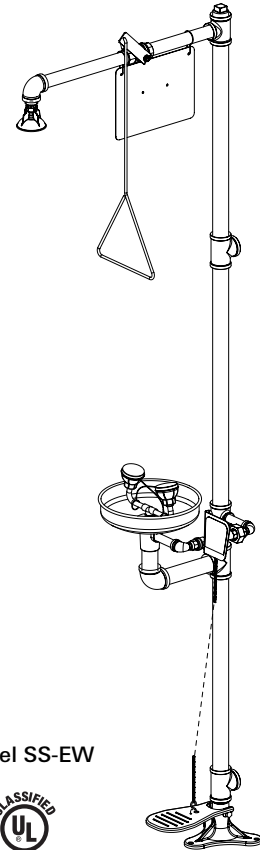

Model SS-EW



Standard Sprayhead Assembly

Twin perforated-disc eye/face wash heads with protective sprayhead covers, operated by a large, highly visible push handle and a foot treadle. Safe, steady water flow under varying water supply conditions from 30–90 PSI is assured by integral flow control in the sprayhead assembly.

Shower Valve

Chrome-plated brass 1" NPT stay-open ball valve. Operated by a stainless steel pull rod with triangular handle.

Eyewash Valve

Chrome-plated brass 1/2" NPT stay-open ball valve. Hand operated by highly visible stainless steel push handle.

Pipe and Fittings

1 1/4" galvanized steel with safety yellow coating.

Water Supply

1 1/4" NPT.

Technical drawing of the 1000 Series Benchtop Microprojector showing dimensions in inches and millimeters:

- Top horizontal distance: $4\frac{1}{2}"$ (114mm)
- Top horizontal distance: $25\frac{1}{4}"$ (641mm)
- Vertical distance from top horizontal line to the center of the projection lens: $25\frac{1}{2}"$ (648mm)
- Projection lens diameter: $\varnothing 3\frac{1}{10}"$ (79mm)
- Overall height to the top of the projection lens: 86" (2184mm) to Floor
- Height to the top of the projection lens: $65\frac{3}{4}"$ (1670mm) to Floor
- Height to the top of the projection lens: $36\frac{1}{8}"$ (918mm) to Floor
- Height to the top of the projection lens: 6" (152mm)

Technical drawing of the front view of a mechanical assembly, likely a pump or motor. The drawing shows a central shaft with a flange on the right and a coupling on the left. Dimensions are provided in inches and millimeters.

- Shaft diameter: $\text{Ø } 10\frac{3}{4}"$ (273mm)
- Flange diameter: $\text{Ø } 9"$ (229mm)
- Flange with (3) $\text{Ø } \frac{3}{8}"$ (10mm) Holes on $\text{Ø } 8"$ (203mm) Bolt Circle
- Distance from shaft center to flange center: $10\frac{1}{2}"$ (267mm)
- Distance from shaft center to coupling center: $9\frac{1}{2}"$ (241mm)

PS - SS-EW - v.1.0